


Please refer to one of these model numbers when ordering parts.


SKU CODES DENOTED IN RED FOR ORDER EFFICIENCY

MODEL
0714E®
WIDE

0714E® TUCKED IN NO WRINKLE LINER
14ENWL FOR BOTH 1" & 3/8" THICKNESSES

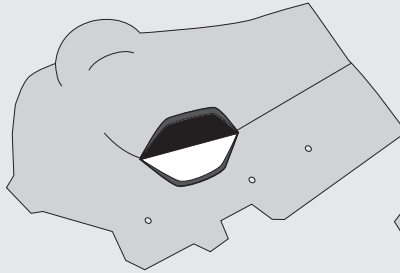


0714® TUCKED IN NO WRINKLE LINER
14SNWL FOR BOTH 1" & 3/8" THICKNESSES

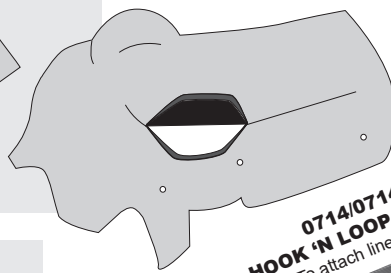

0714/0714E®
HOOK 'N LOOP 1.5" x 8.5"
To attach liner to frame

0714E®
CUSHION INSERT
14EF11 = 1" THICKNESS
14EF158 = 3/8" THICKNESS

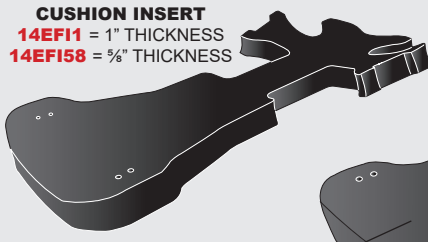

0714®
CUSHION INSERT
14SF11 = 1" THICKNESS
14SF158 = 3/8" THICKNESS



0714/0714E®
HOOK 'N LOOP 1.5"
To attach cushion to frame

SMARTLOCK® PLUS
BUCKLE
SEE INSET 2

0714/0714E®
BUCKLE MOUNT
SEE INSET 1

0714/0714E®
SHIN PLATE

0714/0714E®
STRAP MOUNT
SEE INSET 1


UNIVERSAL STRAP
USTBK

SMARTLOCK® PLUS
BUCKLE
SEE INSET 2


0714E®
WIDE KNEE SEAT



0714®
STANDARD KNEE SEAT

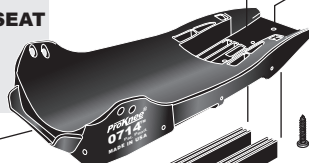

0714/0714E®
BOOT PLATE

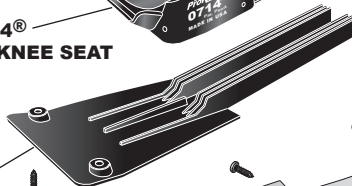

0714/0714E®
RUBBER BOOT
14RB



SMARTLOCK® PLUS
BUCKLE
SEE INSET 2


UNIVERSAL STRAP
USTBK

INSET 1


0714/0714E® STRAP/BUCKLE
MOUNT KIT

14SBM

Sold as a complete unit

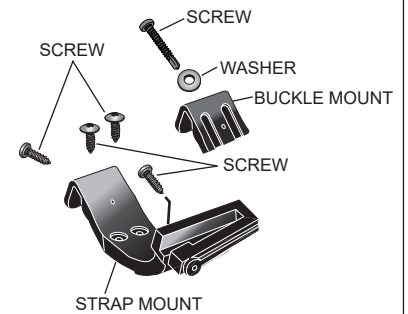

INSET 2

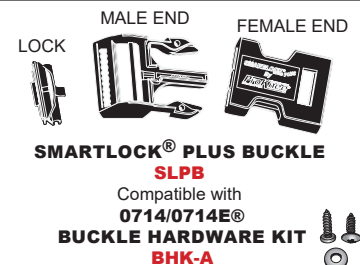

SMARTLOCK® PLUS
BUCKLE
SLPB

Compatible with

0714/0714E®

BUCKLE HARDWARE KIT

BHK-A

LONGER BUCKLE SLOT IS USED TO ATTACH BUCKLE TO 0714 (OUTLINED IN RED). SHORTER SLOT FACES OUT.

Works with all custom fit models past & present and replaces all straps with hook 'n loop*.
For custom length, cut excess strap length & leave 3". Single cut end with lighter to prevent fraying.
*Straps with hook 'n loop available for purchase upon special order request

©ProKnee December 2021, All Rights Reserved.

PRO KNEE[®] 0714[®] STANDARD & 0714E[®] WIDE

REPLACING TUCKED IN NO WRINKLE LINER

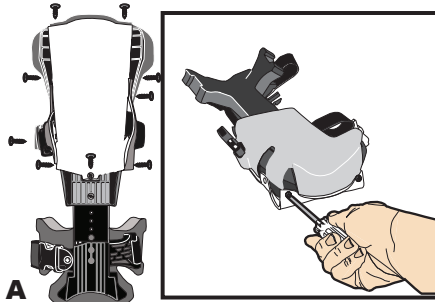



FIGURE A

1 Remove Rubber Boot & Buckle Mount by unscrewing the 9 screws shown in Figure A. Remove old liner.


2 Fit new liner (grey side up) over Knee Seat (Cushion Insert side up) so that ears align with slots.



3 Attach 8½" hook strip (if needed). Wrap & loosely attach one side of liner to hook strip on front side of frame. (You will properly readjust this side in step 4e).

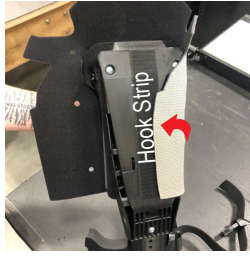

4a Wrap opposite side of liner to front side of frame.

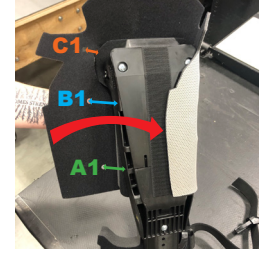

4b Align **A1 Liner Hole** with corresponding hole in frame.



4c Align **B1 Liner Hole** with corresponding hole in frame.



4d With **A1 & B1** holes aligned, firmly attach liner to the **Hook Strip** at the center of the frame.




4e Detach opposite side (from step 3) and align **A2 & B2** Liner Holes to holes in frame before firmly attaching to **Hook Strip**.





5 Align **C1 & C2 Liner Holes** with corresponding holes in frame, then firmly attach liner to the **Hook Strip** at the center of the frame.



6a Fold and tuck top wings in

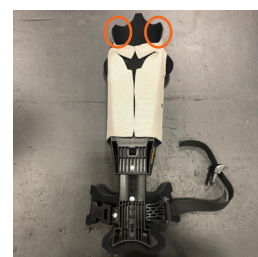

6b Firmly attach center peak to the **Hook Strip** at the top/center of the frame.

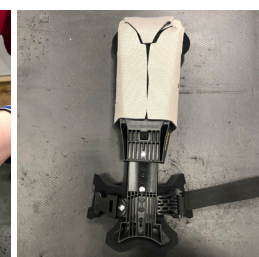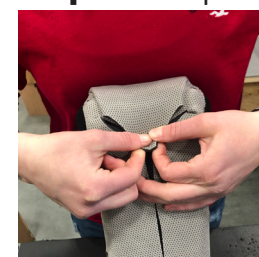

7 Reattach Rubber Boot and Buckle Mount with screws.

