


BUILT TO LAST NOT TO THROW AWAY


ALL PARTS REPLACEABLE

Molded in frame components make replacing parts easy, fast and economical

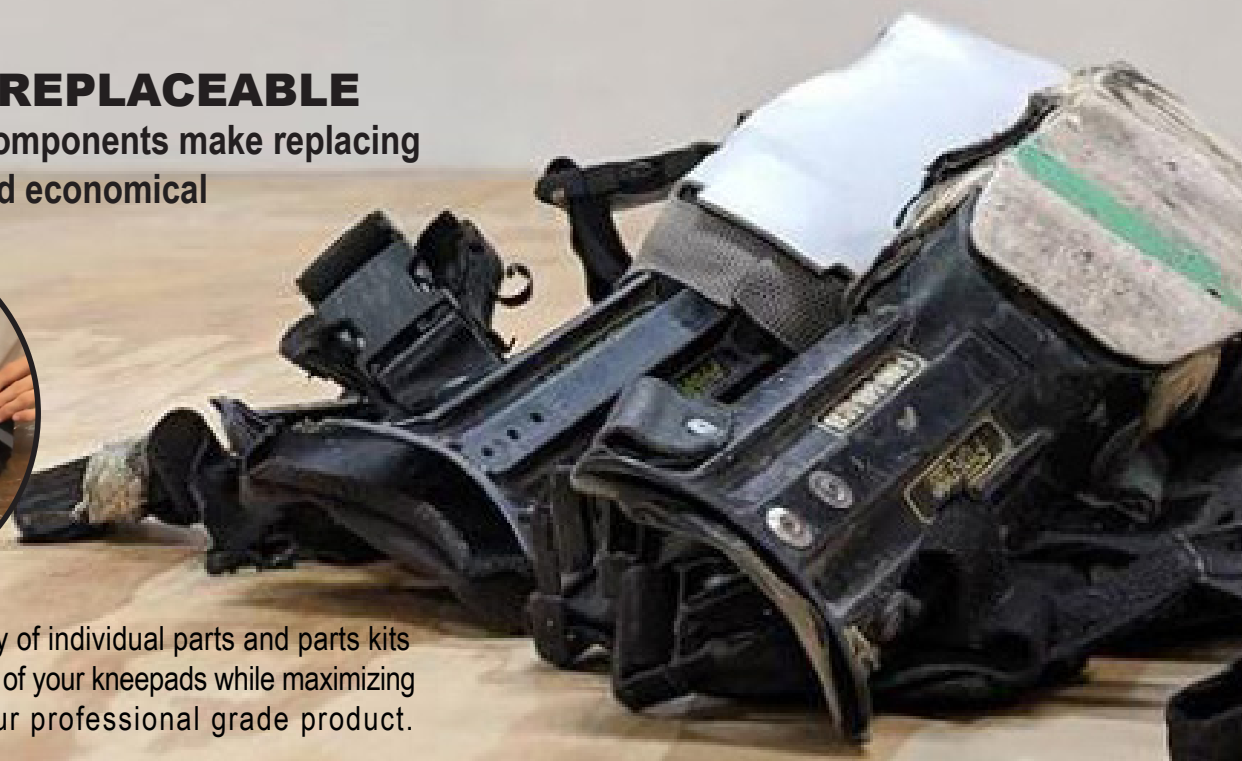

ProKnee offers a variety of individual parts and parts kits options to extend the life of your kneepads while maximizing your investment in our professional grade product.

ALL MODELS PAST & PRESENT CAN BE REBUILT MANY TIMES OVER

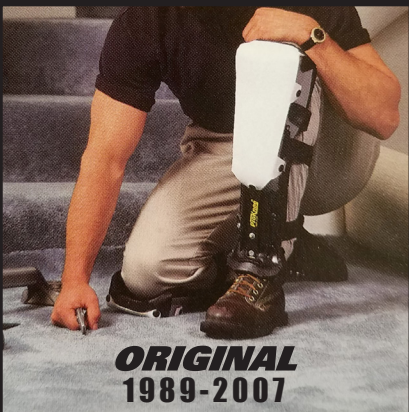

PRO KNEE® REPLACEMENT PARTS AND REBUILD KITS

2 WAYS TO RENEW:

- 1. TOTAL UPGRADE**
 - A. REBUILD THEM YOURSELF WITH PURCHASE OF A COMPLETE REBUILD KIT FROM YOUR LOCAL DISTRIBUTOR
 - B. VISIT YOUR LOCAL DISTRIBUTOR TO GET SET UP WITH A FACTORY REBUILD. THEY WILL SEND YOUR PADS TO US SO WE CAN REBUILD THEM FOR YOU!
- 2. BUY ONLY THE INDIVIDUAL PARTS YOU NEED!**

FROM BUCKLES TO STRAPS, CUSHIONS, LINERS AND BOOTS...
WE'VE GOT THE OPTIONS YOU NEED TO KEEP YOUR MONEY MAKERS GOING!

TO ORDER CORRECTLY SIZED COMPLETE REBUILD KITS OR CUSHION INSERTS:

AB Size Chart

Original & Model 07 Only

3 in = AB 17.5
3½ in = AB 18
4 in = AB 18.5
4½ in = AB 19
5 in = AB 19.5
5½ in = AB 20
6 in = AB 20.5
6½ in = AB 21
7 in = AB 21.5
7½ in = AB 22
8 in = AB 22.5
8½ in = AB 23
9 in = AB 23.5
9½ in = AB 24
10 in = AB 24.5
10½ in = AB 25
11 in = AB 25.5

FIND YOUR SIZE

Model 0714® & 0714E®

STEP 1. Place kneepad as shown and refer to area indicated by red box.


STEP 2. Engraving indicates your AB size. If no engraving, go to Step 3.

STEP 3. Measure distance from bottom edge of white boot to arc of frame as indicated above. Match your measurement to size chart at left.

STEP 1. Place kneepad as shown and push cushion to right to expose numbers as indicated by red box.


STEP 2. The number that lines up with "AB" is the size of your kneepad.

NOT SURE WHAT MODEL YOU ARE? REVIEW EACH MODEL'S IDENTIFYING FEATURES BELOW:

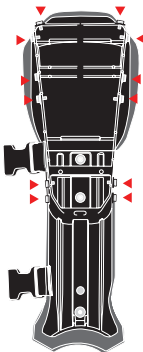


Original Model

- Sold from 1989 to 2007
- White Rubber Boots & Two Ply Liners SNAP ON to frames.
- Knee Seat cushion & Shin Plate cushion – two pieces, held in place with adhesive, ONLY available in 5/8" thickness.
- Quick Release Buckles are riveted to frames & attached with leather "dog tag".

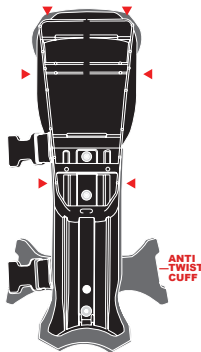


Model 07™

- Sold from 2007 to 2014
- Rubber Boots & No Wrinkle Liners SCREW ON to frames.
- One piece Cushion Insert available in 5/8" & 1" thicknesses – held in place with Cable Ties.
- Quick Release Buckles are riveted to frames & attached with leather "dog tag".
- Anti-Twist Cuff added to Cushion Insert.

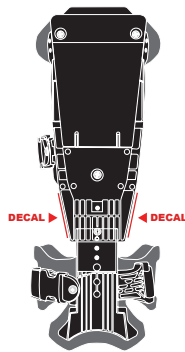


Model 0714® Standard

- Sold from 2014 to present
- New frame is ribbed throughout with Boot Plate
- Decals on kneepad "Model 0714"
- One piece Cushion Insert available in 5/8" & 1" thicknesses held in place with Cable Ties & Hook 'n Loop.
- SmartLock® Plus Quick Release Buckles are screwed on to frames & attached with plastic Buckle/Strap Mount.

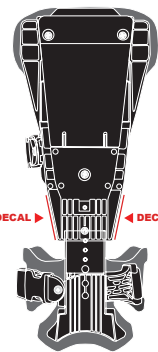

Model 0714E® WIDE

- Sold from 2014 to present
- New frame is ribbed throughout with Boot Plate
- Decals on kneepad "Model 0714E"
- One piece Cushion Insert available in 5/8" & 1" thicknesses held in place with Cable Ties & Hook 'n Loop.
- SmartLock® Plus Quick Release Buckles are screwed on to frames & attached with plastic Buckle/Strap Mount.
- Wider in the Knee Seat than all previous models. (7" across).

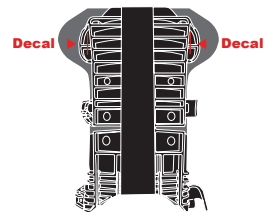

AP16® All purpose

- Sold from 2016 to present
- One Size Fits All.
- Decals on kneepad "AP16"
- Cushion Insert available in 5/8" & 1" thicknesses